


TRIM PROFILES

Step Bevel

Door Stop/ Shoe Mould
W922

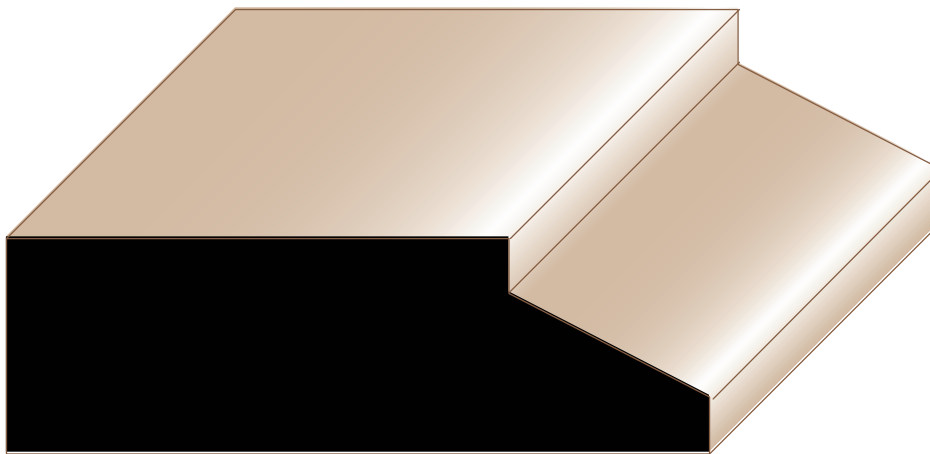

Dimensions

a. $\frac{1}{2}$ " X $1 \frac{1}{4}$ "

b. $\frac{1}{2}$ " X $1 \frac{5}{8}$ "

c. $\frac{7}{16}$ " X 1"

TURKSTRA
DESIGN CENTRE

370 Green Road, Stoney Creek, ON L8E 2M3

Tel: 905-664-7337

turkstradesigncentre.com

TURKSTRA LUMBER
ALWAYS ON THE LEVEL

