


# TRIM PROFILES

## Stop & Shoe

Step Bevel  
W922

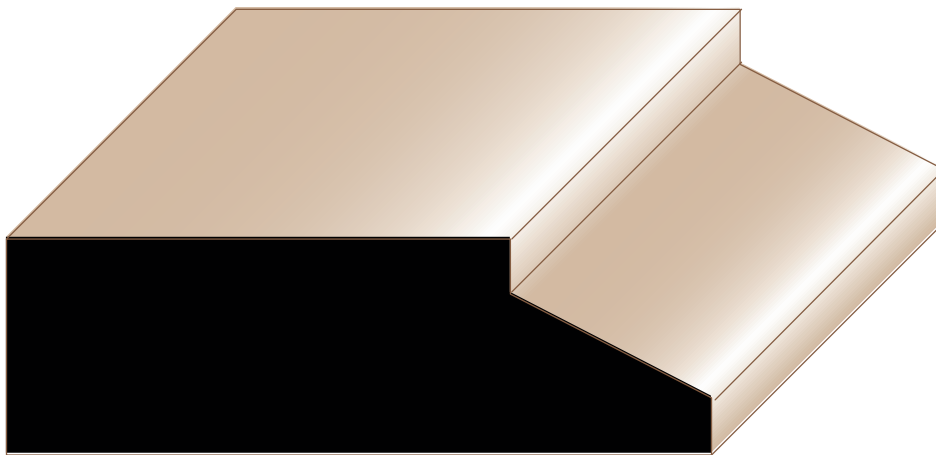

### Dimensions

a.  $\frac{1}{2}$ " X  $1 \frac{1}{4}$ "

b.  $\frac{1}{2}$ " X  $1 \frac{5}{8}$ "

c.  $\frac{7}{16}$ " X 1"

DESIGNER SHOWCASE

Powered by **TURKSTRA LUMBER**

370 Green Road, Stoney Creek, ON L8E 2M3

Tel: 905-664-7337

[designershowcase.ca](http://designershowcase.ca)

**TURKSTRA LUMBER**  
ALWAYS ON THE LEVEL

